

Acoustical Panel Wall Z-Clip Installation

ATTENTION: If you have additional questions after review of this manual please contact your local ASI representative or an ASI professional at our headquarters (952)448-5300

ASI MANUFACTURES DECORATIVE ACOUSTICAL PANELS AND PRODUCTS THAT MUST BE HANDLED WITH CARE. PRODUCTS SHOULD ONLY BE INSTALLED BY EXPERIENCED INSTALLERS.

RECEIVING

Prior to unpacking, check package for any obvious shipping damage. If no evidence of damage is present, move package to a dry/controlled area and inspect it for dents, breakage, or any lesser-noticeable damage that may affect enclosed panels. If damage has been identified, record it/photograph it, and open to inspect for concealed damage. If damage was transferred to the product, document/photograph the issues.

TOOLS

Required:

- Z-Clips (supplied)
- Drywall anchors (supplied)
- Screws (supplied)
- Bubble level
- Tape measure
- Pencil


Optional:

- Concrete anchors

INSTALLATION

Install clips on the back of the panel at resin spot locations. The raised edge of the clip should face the bottom edge of the panel. Measure the distance between the center of each bracket on the back of the panel, between top and bottom clips horizontally and vertically.

[For curve diffusors clips are not needed on the diffusor itself. Measure the distance between the center of each bracket on the back of the curve diffusor. There are two brackets on the top and two on the bottom. Then follow the steps below].

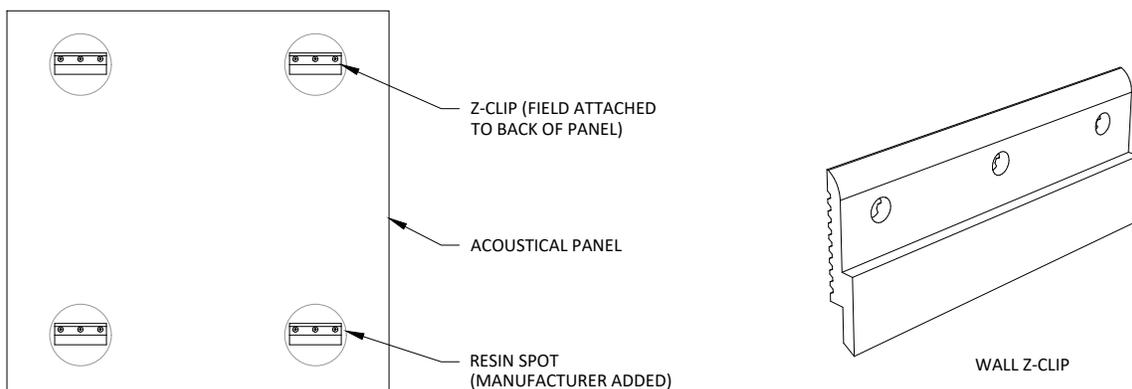

WALL Z-CLIP INSTALLATION INSTRUCTIONS

SHEET NUMBER

1

SCALE: AS NOTED

LAST REVISED: 3/18/2020

DRAWN BY: TL


ASI

123 Columbia Court North, Chaska,
Minnesota 55318 P. 800.527.6253

DO NOT SCALE DRAWING. FIGURED DIMENSIONS ARE TO BE FOLLOWED. READ THIS DRAWING IN CONNECTION WITH GENERAL ARCHITECTURAL PLANS, STRUCTURAL PLANS, AND OTHER RELATED DRAWINGS. THESE DRAWINGS REPRESENT ASI'S UNDERSTANDING AND INTERPRETATION OF THE ARCHITECTURAL DRAWINGS AND HOW ASI PRODUCTS RELATE TO THE PROJECT. COPYRIGHT ASI © 2020

Attach the first clip to the desired location on the wall with the raised edge facing up using the supplied drywall anchors and screws. Using a bubble level and tape measure, mark the locations of the remaining clips. Ensure that the clips are level with one another. If installing on a concrete wall, we recommend using concrete anchors (not included) in the wall prior to installing the clips.

Once all clips are installed, slide the panel down onto the wall clips. The panel attachments should fit securely in the wall clips. Check your work with the bubble level. Adjust as necessary.

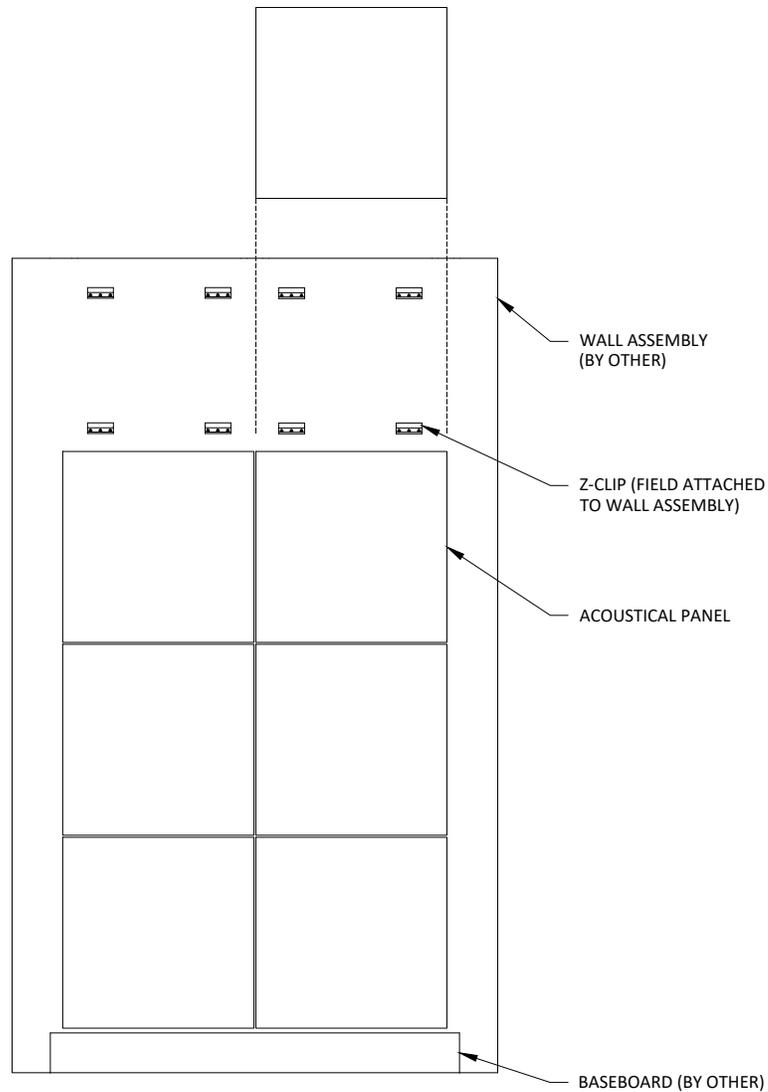

WALL Z-CLIP INSTALLATION INSTRUCTIONS CONTINUED

SHEET NUMBER

2

SCALE: AS NOTED

LAST REVISED: 3/18/2020

DRAWN BY: TL